



NPT CONNECTIONS

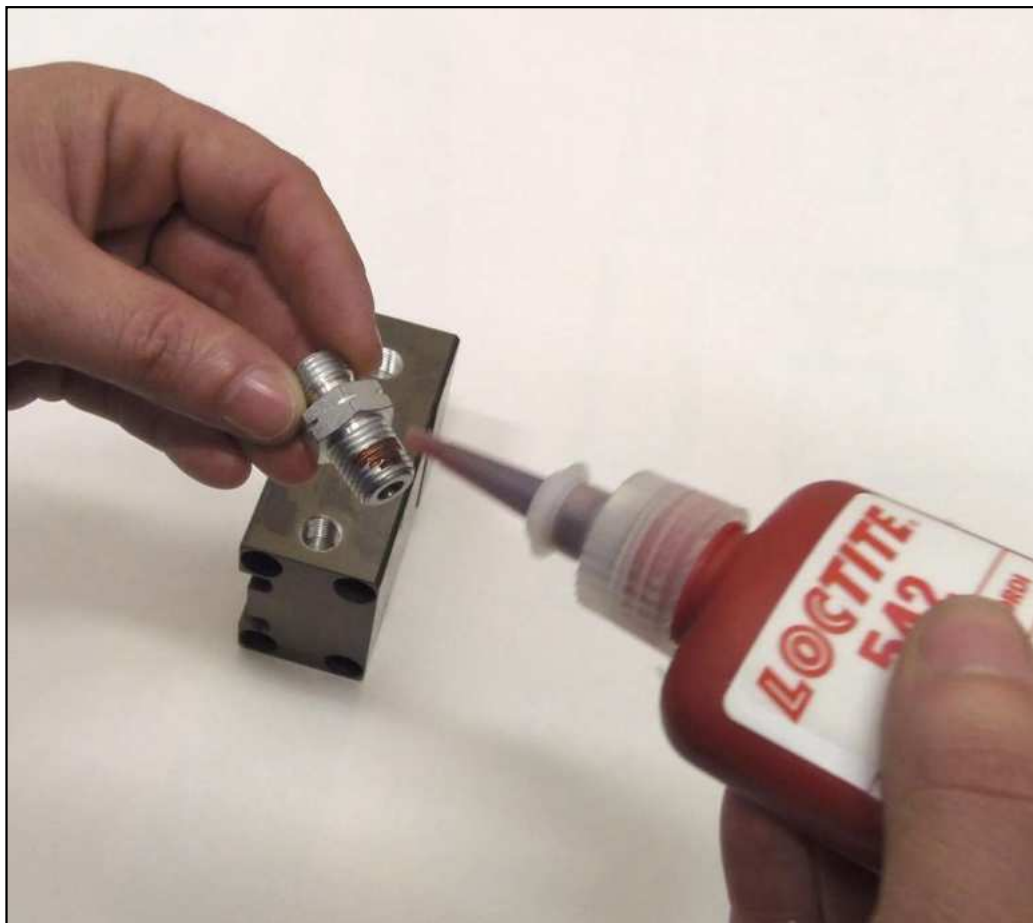




USE A LITTLE QUANTITY
OF LOCTITE 542


SCREW IN THE NIPPLE
INSIDE THE OIL PORT

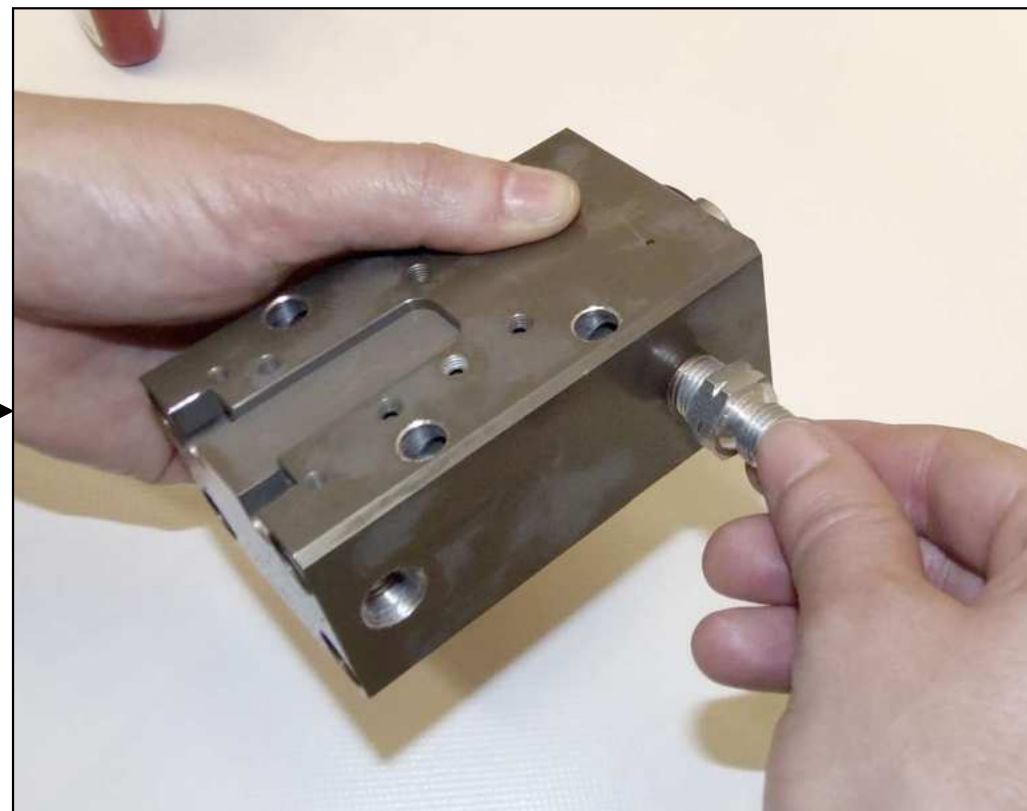

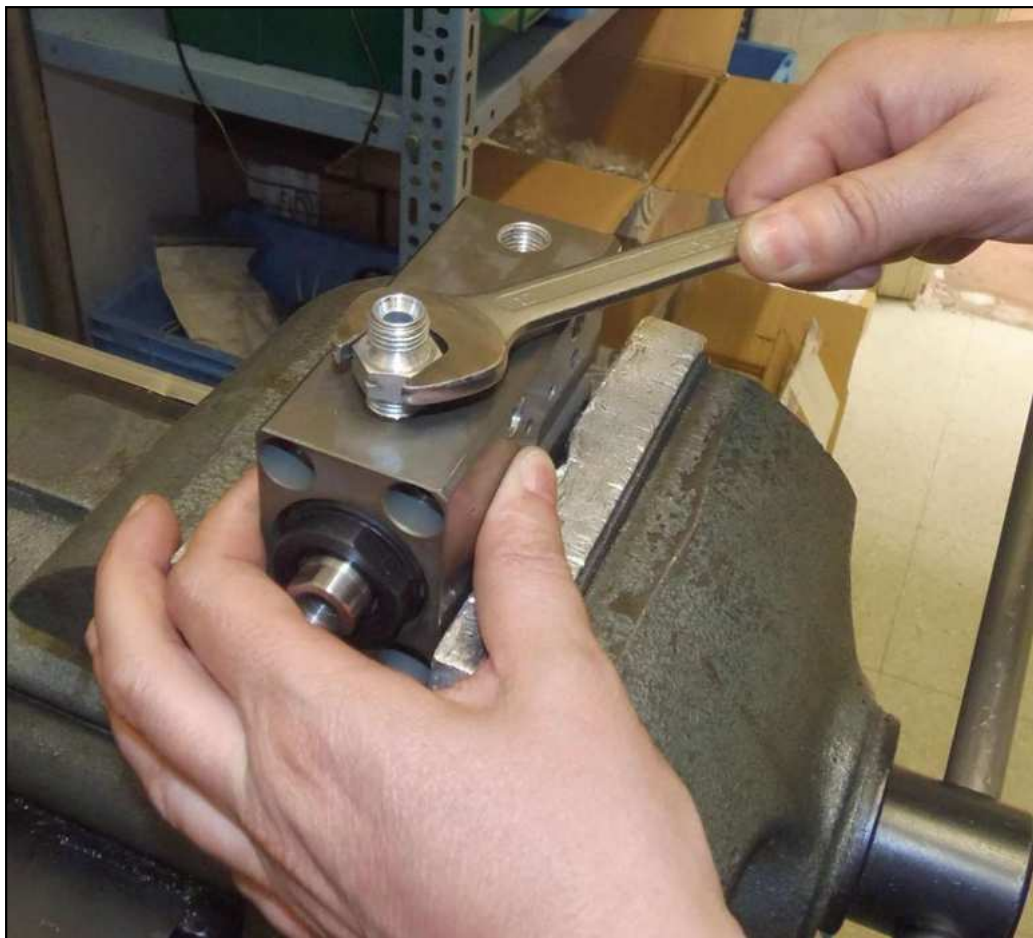



TIGHTEN

THE DRYING TIME OF THE
GLUE IS ABOUT TWO HOURS

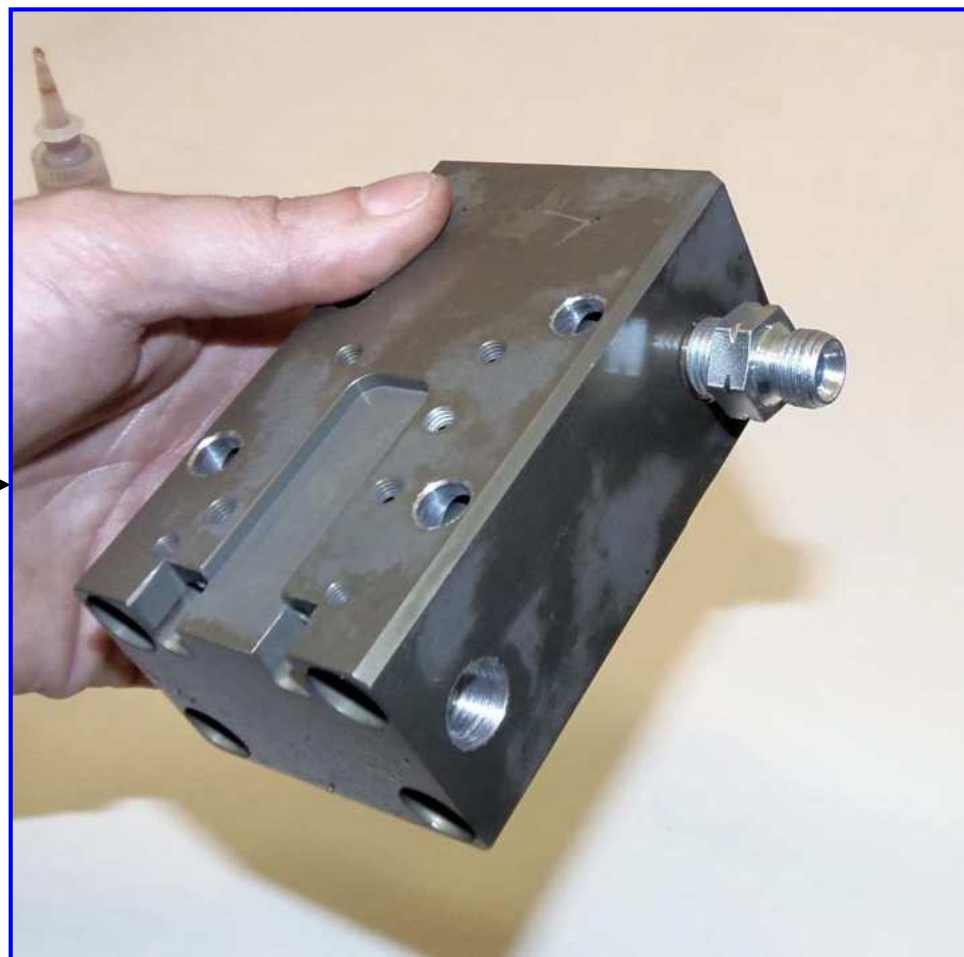


CONNECTIONS WITH ADAPTER BSP / NPT

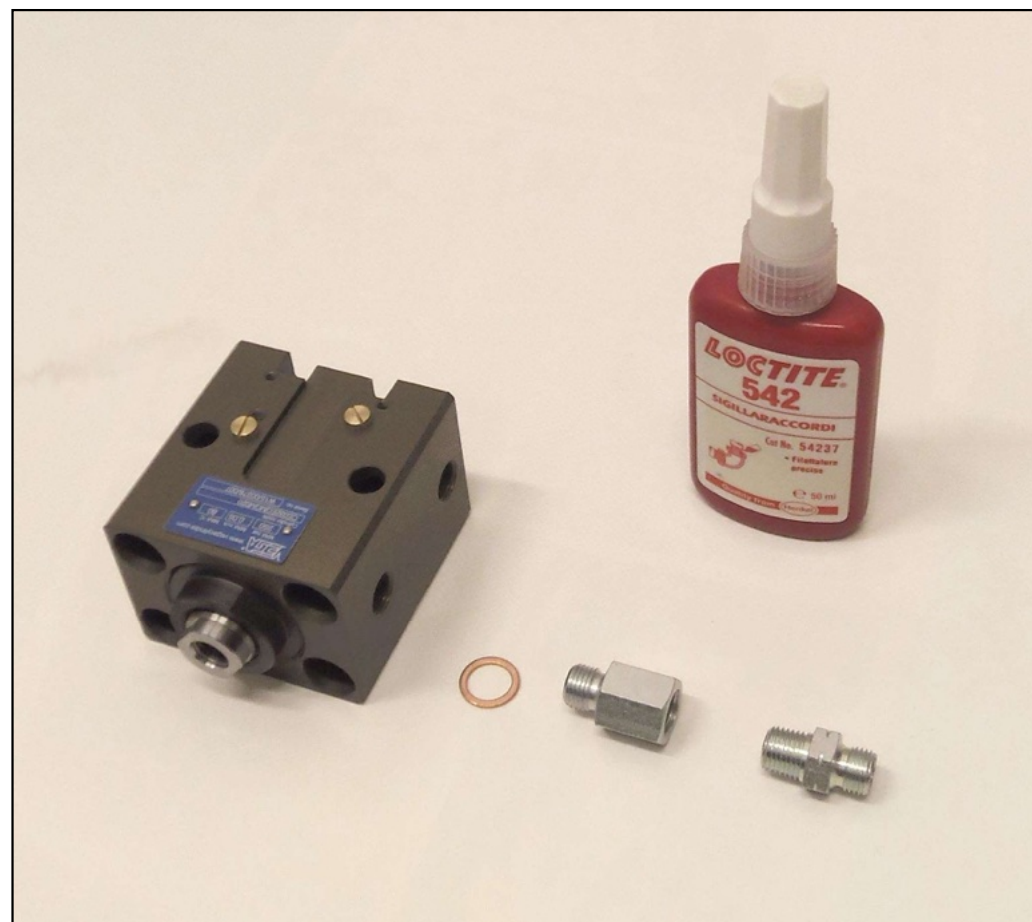

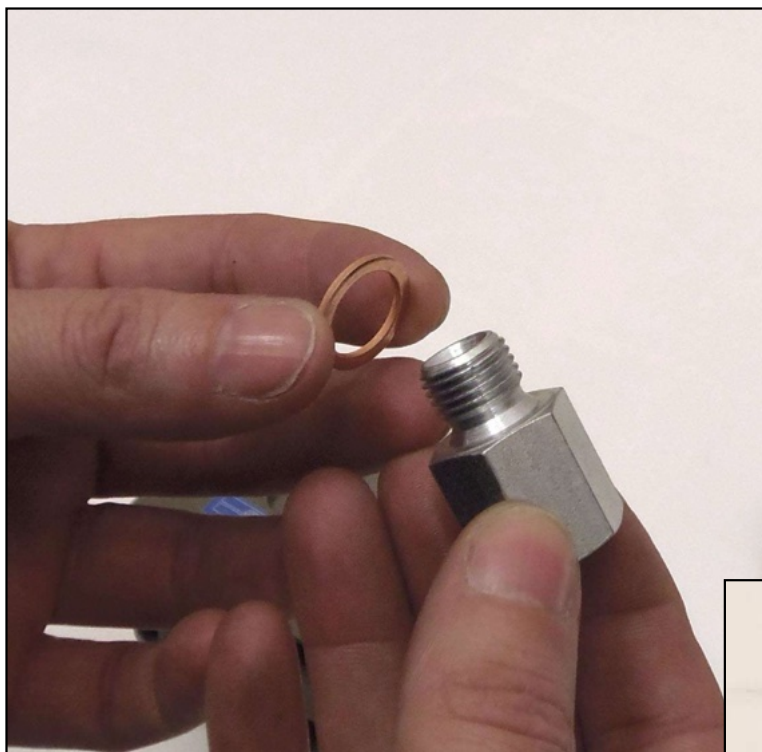


INSERT THE COPPER
SEAL

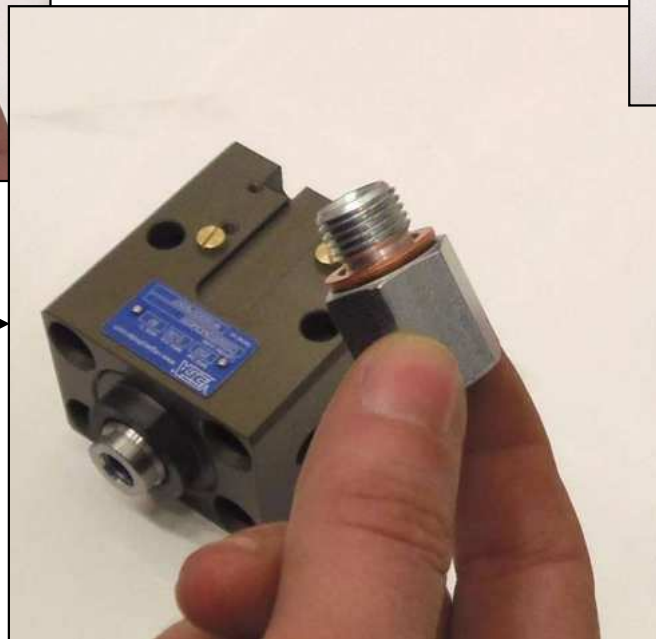

SCREW IN THE ADAPTER
ON THE BSP OIL PORT




TIGHTEN

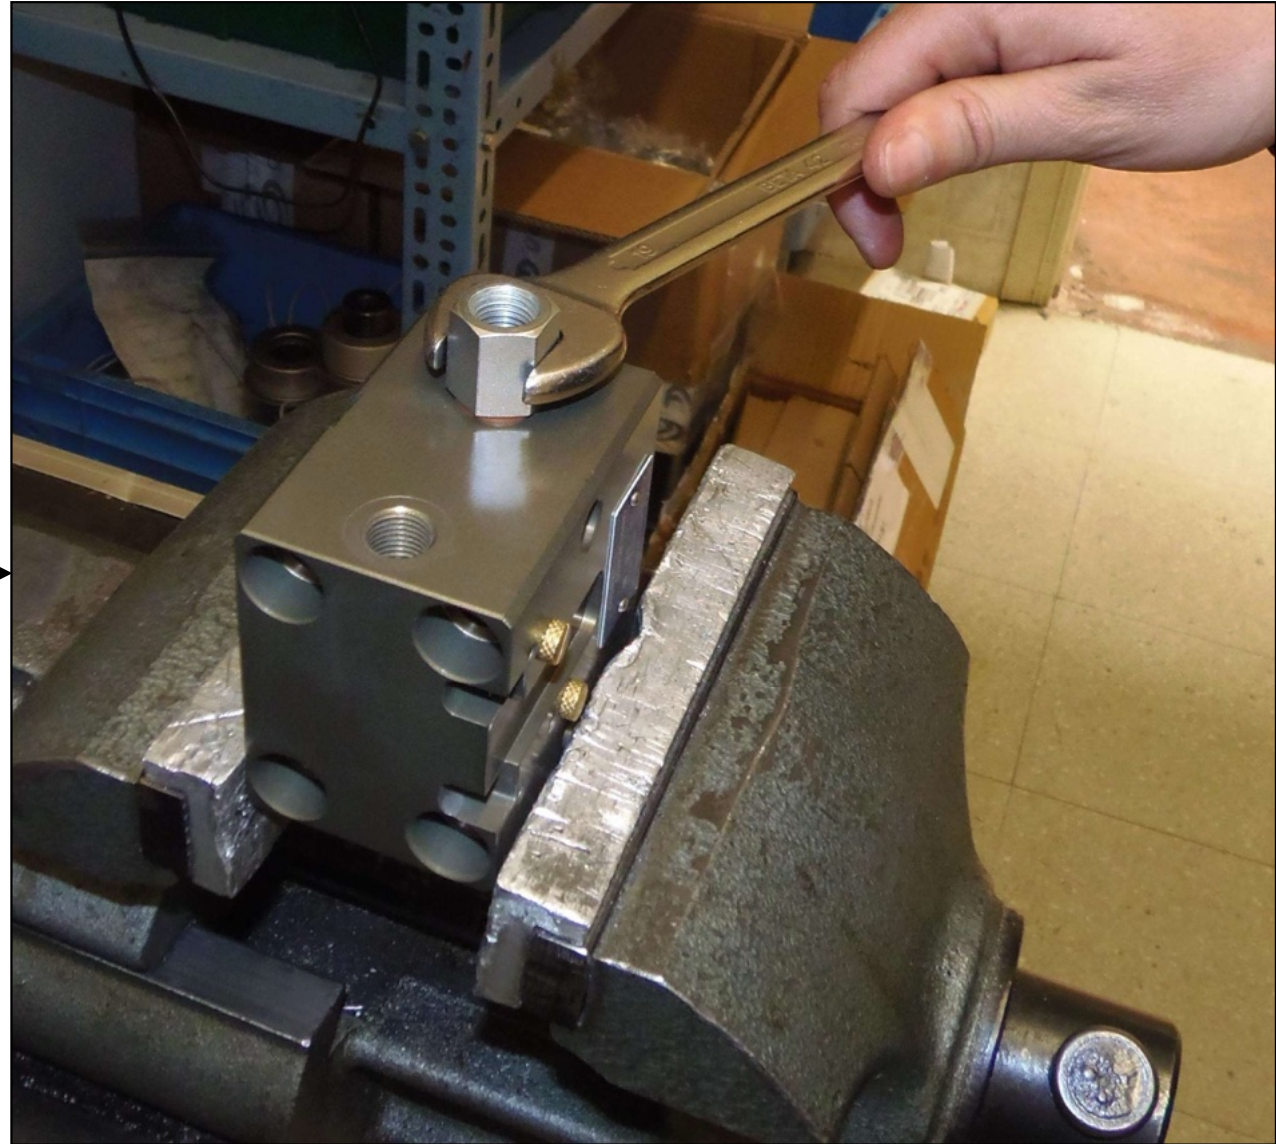



USE A LITTLE QUANTITY
OF LOCTITE 542

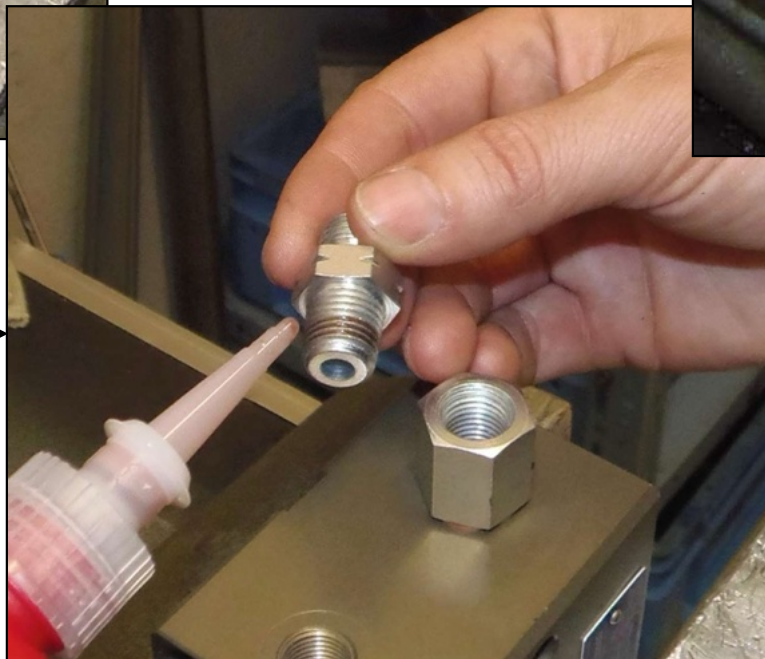

SCREW IN THE NIPPLE
INSIDE THE ADAPTER

TIGHTEN



THE DRYING
TIME OF THE
GLUE IS
ABOUT TWO
HOURS